





























For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade , etc.



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 31 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

Notification icons			
	New Gmail message		More notifications are hidden
	New text or multimedia message		Call in progress (green)
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset (blue)
	New Google Talk message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding is on
	Data is synchronizing		Uploading data
	Problem with sign-in or synchronization		Downloading data
	microSD card is full		Download finished
	Connected to VPN		An open Wi-Fi network is available
	Disconnected from VPN		Phone is connected via USB cable
	Song is playing		Radio is on
	USB tethering is on		System update available

Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PIN or password etc.


1.3.5 Personalize your home screen

Add

Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen, you can add shortcuts, widgets or folders to the Home screen.

Your mobile.....

1.1 Keys and connectors

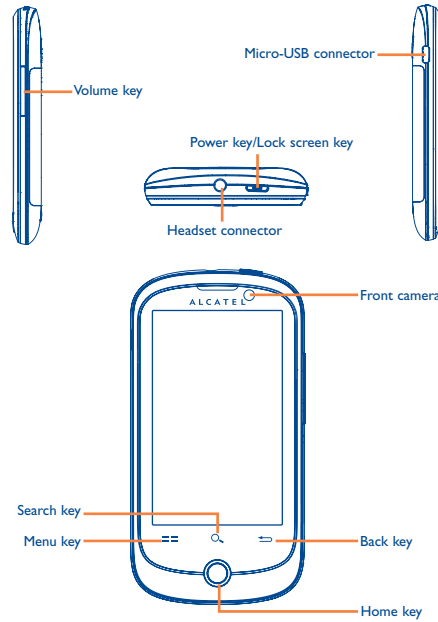

- On Home screen, press to quick access to **Settings** menu or Notification panel; to launch quick search; to customize your Home screen by adding applications or changing wallpaper.
- On other screens, press to view options list.
- Short press: Return to the Home screen or back to the central Home screen if it is extended.
- Long press: Enter the recently used applications list.
- Go back to the previous menu or screen.
- Press to adjust the Volume (in call/media playing mode)
- Open Search bar for searching within an application, the phone or web.

1.2 Getting started

 
1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery



- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the memory card (MicroSD card)



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Charging the battery



Connect the battery charger to your phone and mains socket respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **End** key until the phone powers on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you are required to touch the Android logo to begin and then sign into your Google account to synchronize email, contacts, calendar and other Google applications ⁽¹⁾.



- Enter your user name and password, then touch **Sign in**. If you forget your password, you can go to <http://www.google.com/> to retrieve it. If you don't own a Google Account, you are prompted to create one by touching **Create**.
 - Read the setup information on the screen.
 - Mark/Unmark the check box to choose whether you want to take advantage of Google's location service, then touch **Next**.
 - Mark/Unmark the check box to choose whether you want to back up data with your Google account, then touch **Next**.
 - Set up the date and time, then touch **Next**.
 - Touch **Finish setup**.
- This initial set up can be skipped and enabled via **Settings\Accounts & sync**.

In power on screen without SIM card inserted, you can also connect to a Wi-Fi network to sign into your Google account and to use some features.


⁽¹⁾ Application availability depends on country and operator.

1.2.3 Power off your phone

Hold down the **End** key from the Home screen until the phone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.

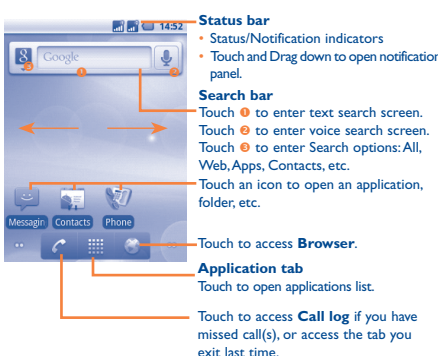

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the lower left and right of the screen indicate which screen you are viewing.

Touch & hold the small dots or application tab can display the thumbnails of extended home screen, touch the thumbnail to open it. Press **Back** key or touch an empty area to return to Home screen.

1.3.1 Using the touchscreen

Touch

To access an application, touch it with your finger.

Touch and Hold

To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, options list will then appear on screen.

Drag

Place your finger on the screen to drag an object to another location.

Slide/Swipe

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick

Similar to swiping, but flicking makes it move quicker.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better screen view.

1.3.2 Status bar

From status bar you can view both phone status (to the right side) and notification information (to the left side). When the status bar is full, " " icon will appear, touch to display hidden icons.

Status icons

	GPRS connected		Speakerphone is on
	GPRS in use		Roaming
	EDGE connected		No signal
	EDGE in use		Vibrate mode
	Connected to a Wi-Fi network		Ringer is silenced
	Bluetooth is on		Phone microphone is mute
	Connected to a Bluetooth device		Battery is very low
	Airplane mode		Battery is low
	Alarm is set		Battery is partially drained
	Signal strength		Battery is full
	GPS is on		Battery is charging
	Receiving location data from GPS		Headset connected



7 Getting connected.....

To connect to the internet with this phone, you can use GPRS/HSDPA/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/HSDPA/3G

The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS, HSDPA or 3G.

To check the network connection you are using, press **Menu** key on Home screen, then touch **Settings**/**Wireless & networks**/**Mobile networks**/**Network operators** or **Access Point Names**. For dual SIM model, touch either SIM1 or SIM2 on the above tabs to complete the operation.

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Press **Menu** key from Home screen.
- Touch **Settings**/**Wireless & networks**/**Wi-Fi**.
- Mark/Unmark the checkbox to turn on/off Wi-Fi.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

21

• CHARGERS

Main power chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	WCDMA 2100MHz Band	0.624 W/kg
Body-worn SAR	EGSM 900MHz Band	0.526 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

31

7.2 Browser.....

Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

More options on the web page

Touch the **Menu**, you have more options, such as, add new window, add bookmark, select text, and so on.

7.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's MicroSD card and the computer.

To connect/disconnect your phone to/from the computer

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.
- Touch **Mount** in the dialog that opens to confirm that you want to transfer files.
- To disconnect:
 - Unmount the microSD card on your computer.
 - Open the Notifications panel and touch **Turn off USB storage**.
 - Touch **Turn off** in the dialog that opens.

To locate data you have transferred or downloaded in your MicroSD card:

- Touch Application tab from Home screen to open the applications list.
- Touch **FileManager**.

All data you have downloaded are stored in **FileManager**, where you can view media files (videos, photos, music and others), rename files, install applications into your phone, etc.

22

• LICENCES

